

Soundcraft Vi4™/Vi6™ User Guide





IMPORTANT

Please read

this manual carefully before using your mixer for the first time.



This equipment complies with the EMC directive 2004/108/EC and LVD 2006/95/EC

This product is approved to safety standards
IEC 60065:2001 (Seventh Edition) +A1:2005
EN60065:2002 +A11:2008
UL60065-03
CAN/CSA-E60065-03

And EMC standards
EN55103-1: 1996 (E2)
EN55103-2: 1996 (E2)

Warning: Any modification or changes made to this device, unless explicitly approved by Harman, will invalidate the authorisation of this device. Operation of an unauthorised device is prohibited under Section 302 of the Communications act of 1934, as amended, and Subpart 1 of Part 2 of Chapter 47 of the Code of Federal Regulations.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna
- * Increase the separation between the equipment and the receiver
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help

For further details contact

Harman International Industries Ltd, Cranborne House, Cranborne Road, Potters Bar, Hertfordshire EN6 3JN, UK
Telephone +44(0) 1707 665000 Fax +44 (0)1707 660742 email: soundcraft@harman.com

© Harman International Industries Ltd. 2010. All rights reserved
Parts of the design of this product may be protected by worldwide patents.

Part No. Part No. ZM0346-01 Issue4
E&OE September 2010

Soundcraft is a trading division of Harman International Industries Ltd. Information in this manual is subject to change without notice and does not represent a commitment on the part of the vendor. Soundcraft shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, electrical, mechanical, optical, chemical, including photocopying and recording, for any purpose without the express written permission of Soundcraft.



Harman International Industries Limited
Cranborne House, Cranborne Road, Potters Bar, Hertfordshire, EN6 3JN, UK
Tel: +44 (0)1707 665000
Fax: +44 (0)1707 660742
<http://www.soundcraft.com>

Contents

INTRODUCTION	01 -1
SAFETY NOTICES	01 -1
SAFETY SYMBOL GUIDE	01 -1
IMPORTANT SAFETY WARNINGS	01 -2
WARNINGS	01 -3
WORKING SAFELY WITH SOUND	01 -4
Soundcraft Vi6™ FEATURES AND SPECIFICATIONS	01 -5
Audio Channels	01 -5
I/O Capability	01 -5
Miscellaneous.....	01 -5
Channel Processing.....	01 -6
Control Surface.....	01 -7
CONSOLE OVERVIEW	01 -8
Bays	01 -8
Layers.....	01 -9
Encoders.....	01 -10
Master Audio Functions	01 -11
Master Control	01 -12
SYSTEM COMPONENTS	02 -1
SYSTEM HARDWARE OVERVIEW	02 -2
NOTE ON INSTALLATION OF THE COOLING FANS/FILTERS	02 -3
THE CONSOLE REAR CONNECTORS	02 -4
Mains Power Supply Inlet	02 -4
Audio And Data Rearcon	02 -4
LOCAL RACK	02 -6
ZZ -6	
Local Rack Description	02 -6
How It Works	02 -6
Front Panel	02 -6
Local Rack Rear	02 -7
Card Function Overview.....	02 -10
STAGE BOX	02 -13
Stage Box Description.....	02 -13
Card Function Overview.....	02 -13
Redundant MADI Cable Operation	02 -14
Front Panel	02 -15
CONNECTING THE PARTS OF THE SYSTEM	
(With Cat 5 Breakout Panel Fitted)	02 -16
CONNECTING THE PARTS OF THE SYSTEM	
(Without Cat 5 Breakout Panel Fitted).....	02 -18
OPERATION OVERVIEW	03 -1
GENERAL RULES	03 -1
CONVENTIONS USED IN THIS MANUAL	03 -1
SCREENS	03 -1
Input Screens.....	03 -1
Screen Colour Codes.....	03 -2
VISTONICS II™ KNOBS	03 -3
AUDIO FUNCTION STATES	03 -3

MOMENTARY/LATCHING CONTROL ACTION	03 -3
SOLO/SEL KEYS	03 -4
LABELLING.....	03 -4
General.....	03 -4
Channel Labels.....	03 -5
BUS CONFIGURATION	03 -6
GANG	03 -7
General.....	03 -7
Creating A Gang	03 -7
Cancel The Gang.....	03 -7
Gang All Input Channels.....	03 -7

INPUT	04 -1
SIGNAL FLOW.....	04 -1
INPUT CHANNEL STRIP.....	04 -2
INPUT CHANNEL TOUCH FIELDS.....	04 -3
Change A Parameter Of An Input Channel	04 -3
INPUT	04 -4
INPUT field	04 -4
GAIN field	04 -5
TRIM field	04 -5
LO CUT field	04 -5
HI CUT field	04 -5
FORMAT field	04 -5
PAIRING field	04 -5
PHANTOM field.....	04 -5
PHASE field.....	04 -5
IN1 PATCH field	04 -5
IN2 PATCH field	04 -5
CH Label field.....	04 -5
DLY field	04 -5
STEREO CONFIGURATION	04 -6
Pairing of input channels	04 -6
Pair An input Channel	04 -6
Stereo Busses	04 -7
EQUALISER	04 -8
General.....	04 -8
Equaliser Band Highlight.....	04 -9
BAND Field.....	04 -9
SHELF Switch	04 -9
EQUALISER Field	04 -10
DYNAMICS	04 -10
General.....	04 -10
GATE Function	04 -10
DE-ESS Function.....	04 -12
COMPRESSOR Function	04 -13
LIMITER Function	04 -13
MKUP	04 -13
BUS.....	04 -14
General.....	04 -14
AUX (Mono)	04 -14
AUX (Stereo)	04 -14
GRP (Mono)	04 -14
GRP (Stereo).....	04 -14
Empty	04 -14

PANNING	04 -15
General.....	04 -15
PAN Function LR Mode.....	04 -15
PAN Function LCR Mode.....	04 -16
AUDIO FORMAT	04 -17
General.....	04 -17
Input Channels.....	04 -17
Mix Busses.....	04 -17
Masters	04 -17
PAN/BAL	04 -18
INSERT Function.....	04 -19
Direct Out Function.....	04 -19
OUTPUTS	05 -1
SIGNAL FLOW	05 -1
GENERAL	05 -2
L,R & C Master Processing.....	05 -3
MASTER BAY OUTPUT STRIPS	05 -4
Bus Master Processing	05 -5
INPUT BAY STRIP USING [ALL BUSSES]	05 -6
MASTER BAY VISTONICS™ ENCODERS & KEYS	05 -7
VST Key Function	05 -7
CHANGING OUTPUT BUS PARAMETERS	05 -8
Changing A Parameter Of A Bus.....	05 -8
EQUALISER	05 -9
DYNAMIC	05 -10
PAN	05 -11
LOW CUT Field	05 -11
PHASE Field	05 -11
DLY Field.....	05 -11
MATRIX	06 -1
SIGNAL FLOW	06 -1
FUNCTION	06 -1
Change A Matrix Send Level	06 -3
MATRIX CONFIGURATION	06 -3
SOURCE field	06 -3
MTX Point Field	06 -4
ENCODERS	07 -1
GENERAL INTRODUCTION	07 -1
CHANNEL ENCODERS	07 -2
CHANNEL VST ENCODER 1& 2	07 -3
VST Encoder Priority.....	07 -3
Changing Encoder Function.....	07 -4
MASTER BAY PANEL ENCODERS	07 -5
MASTER BAY VST ENCODERS	07 -5
Master Vistonics Switch Functions Panel	07 -6
LAYERING (STRIP ASSIGNMENT)	08 -1
GENERAL	08 -1
INPUTS	08 -1

Temporary Layer	08 -2
OUTPUT	08 -3
Master Fader section	08 -3
ALL Busses.....	08 -4
VST Master Area	08 -5
VCA & MUTE GROUPS	09 -1
VCA/MUTE GROUP INDICATION.....	09 -1
MUTE GROUP MASTER SWITCHES	09 -2
VCA CONTROL GROUP BEHAVIOUR	09 -2
AUDIO BEHAVIOUR	09 -2
ASSIGNING VCAs	09 -3
ASSIGNING MUTE GROUPS	09 -3
ASSIGNING VCAs AND MUTE GROUPS TO OUTPUT CHANNELS	09 -3
VCA GROUPS WHEN AUX SENDS ARE CONTROLLED BY CHANNEL FADERS	09 -3
Procedure	09 -4
PATCH SYSTEM	10 -1
SIGNAL FLOW	10 -1
OVERVIEW.....	10 -2
GENERAL RULES.....	10 -2
INPUT	10 -3
Patch An Input To An Input Channel	10 -4
Using A Spare Mic For Several Inputs	10 -4
OUTPUT	10 -5
Patch a BUS to an OUTPUT	10 -5
INSERT	10 -6
Patching An Insert Point To An Input Channel	10 -6
Patching Insert Send Or Return Signals To The Connectors Or MADI Channels	10 -7
Stereo Inserts	10 -7
DIRECT OUT.....	10 -8
KEY SIGNAL.....	10 -9
MATRIX.....	10 -10
TIE LINES	10 -11
MONITORING	11 -1
SIGNAL FLOW	11 -1
FUNCTION	11 -1
DESK VIEW	11 -2
SOLO TRIM	11 -2
SOLO BLEND	11 -2
PHONES Volume	11 -2
SETUP.....	11 -2
Level Meter	11 -3
PFL/AFL Indication.....	11 -3
ON	11 -3
Monitor Volume	11 -3
Monitor B.....	11 -3
MONITOR SETUP PAGE.....	11 -4
SOLO Section	11 -4
MNTR A Section.....	11 -5
MNTR B and HP Sections.....	11 -6

DLY Field	11 -7
MONITOR SETUP SUB-PAGE	11 -8
Output Solo Selection	11 -10
SOLO SYSTEM	11 -11
Solo Operation Logic.....	11 -12
Input Priority Mode	11 -13
Autocancel Behaviour	11 -14
Follow Output Solo Mode.....	11 -15
TALKBACK & OSCILLATOR	12 -1
DESK VIEW	12 -1
Setup Key.....	12 -1
TB Mic XLR.....	12 -1
TB /Osc Level control.....	12 -1
Routing the TB signal	12 -1
SETUP.....	12 -2
OSC Section	12 -2
TB Send Section	12 -5
TB Return Section.....	12 -6
METERING	13 -1
Input Channel Meter.....	13 -1
Bus Master Meters	13 -2
Master Output Meters	13 -2
Monitor Meters	13 -2
Scale	13 -2
Meters On The Master Section Screen	13 -3
Touch Selection.....	13 -3
Peak Hold	13 -4
Ballistics	13 -4
MAIN MENU	14 -1
MAIN	14 -1
SECURITY Field	14 -1
BRIGHTNESS Control	14 -1
SHOW	14 -2
GPIO.....	14 -3
SYNC	14 -4
TIE LINES	14 -5
FX	14 -6
MIDI	14 -7
LOG	14 -8
SETTINGS.....	14 -9
POINT	14 -9
DEACTIVATE FADER TOUCH.....	14 -9
SYSTEM MONITORING.....	14 -10
Overview	14 -10
DESK	14 -11
LOCAL IO.....	14 -12
STAGE BOX.....	14 -13
HiQNET	14 -14

SNAPSHOTS AND CUES	15 - 1
FRONT PANEL DISPLAY AND CONTROLS	15 - 1
SETUP	15 - 2
DATA Socket	15 - 2
STORE	15 - 2
UNDO	15 - 2
PREV MODE	15 - 2
LAST	15 - 2
NEXT	15 - 2
The Arrow Keys and RECALL	15 - 2
SETUP	15 - 3
Snapshot Pool	15 - 3
Cue List	15 - 3
MANAGING SHOWS	15 - 4
Hard Drive	15 - 4
Memory Stick	15 - 5
Exporting A Show To A Memory Stick	15 - 5
Importing A Show From A Memory Stick	15 - 5
RECORDED DATA	15 - 6
Settings Recorded Within A Show Snapshot's Show Settings	15 - 6
Settings Recorded Within Audio Settings	15 - 7
Settings Not Recorded	15 - 7
GPIO	16 - 1
CONFIGURATION	16 - 1
Screen Touch-Pads	16 - 1
GPI VST Keys & Encoders	16 - 2
GPO VST Keys & Encoders	16 - 2
HARDWARE	16 - 4
Schematic Diagram	16 - 4
Pin Lists	16 - 5
SOUNDCRAFT FaderGlow™	17 - 1
GENERAL	17 - 1
<i>Figure 17-1: Soundcraft FaderGlow™</i>	17 - 1
Colour Code	17 - 1
COPY, PASTE & LIBRARIES	18 - 1
INTRODUCTION	18 - 1
CONSOLE CONTROL KEYS	18 - 1
COPY & PASTE PRINCIPLES	18 - 2
DATA SELECTION & INDICATORS	18 - 2
PARAMETERS NOT INCLUDED IN CHANNEL & BUS COPY MODES	18 - 3
COPYING CHANNEL OR BUS PARAMETERS	18 - 3
COPYING A BUS MASTER INCLUDING ALL CHANNEL SEND LEVELS	18 - 3
CHANNEL COPY: ITEMS NOT INCLUDED IN COPY WITH SEL BUTTON	18 - 4
BUS OUTPUT COPY: ITEMS NOT INCLUDED IN COPY WITH SEL BUTTON	18 - 4
EXAMPLE: COPYING A WHOLE CHANNEL, INCLUDING THE 'IN1 PATCH' PARAMETER	18 - 4
COPYING FX PARAMETERS	18 - 5
LIBRARIES	18 - 7
NAVIGATING AND MANAGING LIBRARIES	18 - 9
COPY TO LIBRARY	18 - 11
PASTE FROM LIBRARY	18 - 12

EXPORTING AND IMPORTING LIBRARIES	18 - 13
---	---------

SOUNDCRAFT Vi4™/Vi6™ FEATURES AND SPECIFICATIONS **19 - 1**

AUDIO CHANNELS	19 - 1
Max number of simultaneous mixing channels.....	19 - 1
Insert points.....	19 - 1
Direct Outputs.....	19 - 1
Busses.....	19 - 1
I/O CAPABILITY	19 - 1
Local Rack Inputs.....	19 - 1
Local Rack Outputs.....	19 - 1
Stagebox Inputs	19 - 1
Stagebox Outputs	19 - 1
MISCELLANEOUS	19 - 2
Connection from local rack to stagebox	19 - 2
Max distance, local rack to stagebox:	19 - 2
GPIO facility.....	19 - 2
MIDI	19 - 2
CHANNEL PROCESSING	19 - 2
Inputs.....	19 - 2
Outputs.....	19 - 2
CONTROL SURFACE	19 - 3
Inputs.....	19 - 3
Outputs.....	19 - 3
Misc	19 - 3
Vi6 TYPICAL SPECIFICATIONS	19 - 4

Vi Processor™ Card **20-1**

General	20-1
LEXICON® Effects.....	20-1
BSS® Graphic Equalisers	20-1
LEXICON® Effects Format	20-1
FX Overview Page	20-2
Snapshot integration	20-2
TAP	20-3
Assigning FX processors	20-3
Channel Insert	20-3
Master Insert.....	20-6
Return in Channel section	20-8
FX TYPE	20-10
FX DESCRIPTIONS	20-12
REVERBS	20-12
DELAYS	20-14
MISC EFFECTS	20-16
BSS® Graphic Equalisers	20-20

MIDI **21 - 1**

Main Menu –MIDI page open & RX Channel list selected	21 - 1
DEVICE LISTS	21 - 1
Main Menu –MIDI page open & TX Channel list selected	21 - 3
Main Menu –MIDI page open & Transmit Device IDs list selected	21 - 4
MIDI Event Types	21 - 5

96 CHANNEL VERSION	22 - 1
Accessing the Additional 32 channels.....	22 - 1
Hints on using the DSP Upgrade's additional 32/24 channels.....	22 - 2
Installing a Third DSP card for 96/72ch operation	22 - 3
TECHNICAL INFORMATION	23 - 1
Vi Series Standard I/O Cards	
LINE IN CARD	23 - 2
LINE OUT CARD	23 - 4
MIC/LINE IN CARD	23 - 6
AES/EBU I/O CARDS	23 - 8
MADI I/O CARDS	23 - 11
MADI HD CARDS	23 - 15
GPIO CARD WITH RELAY OUTPUTS	23 - 19
Vi Series Optional I/O Cards	23 - 21
CobraNet® CARD	23 - 22
Aviom A-Net® CARD	23 - 24
EtherSound® CARD	23 - 26
ADAT I/O CARD	23 - 28
SDI INPUTCARD	23 - 30
SDI I/O CARD	23 - 32
DOLBY® E/DIGITAL DECODER CARD	23 - 34
BLOCK DIAGRAM	24-1
Soundcraft Vi4 Block Diagram	24 - 1
Soundcraft Vi6 Block Diagram	24 - 2
VM²	25-1
VM² Concepts	25 - 1
Identifying the HiQnet Network connector on Vi consoles	25 - 4
Detailed Console Operation of VM2	25 - 5
TROUBLESHOOTING A VM2 SETUP	25 - 14
FAQs - AKG Wireless Systems	25 - 14