



Erratum

The manual supplied with this console states that the insert points are wired as follows:

Tip = return
Ring = send
Shield = ground.

This is incorrect. The console's insert points are, in fact, wired as follows:

Tip = send
Ring = return
Shield = ground.